

Southwest Mesa Kit

Kit Features:


- Easy to turn with straight tubes
- Minimum parts - easy to assemble
- Available in multiple finishes
- Uses Parker® style refills
- Overall Length: 5-5/8"

Required Accessories:

- 7mm Pen Mandrel
- Drill Bit: 3/8" #PKEXEC-38
- Bushing set(2 pc): #PKCHPENBU
- Barrel Trimming set: #PKTRIM38
- Live Tailstock Center
- 2 Part Epoxy Glue or Insta Cure (Cyanoacrylate) Glue
- Pen Blank: Minimum Size - 3-1/2" x 3/8"



DIAGRAM A / PARTS LAYOUT

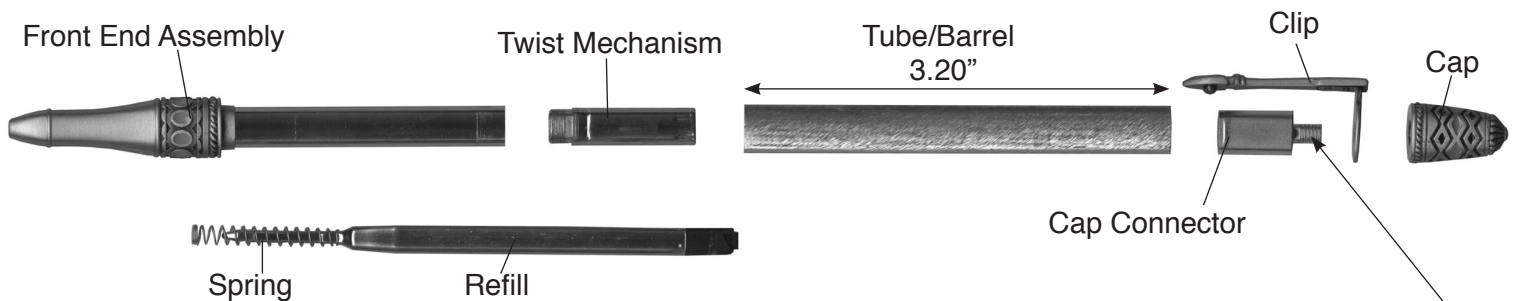


NOTE: When assembling, do not press directly on the threads

Preparing the Blank:

- Cut 1 blank to the length of the tube and add 1/16" for squaring off.
- Drill a 3/8" hole lengthwise through the blank.
- Spread glue over the tube, insert the blank with a twisting motion to spread the glue evenly inside.
- Center the tube lengthwise inside the blank.
- When the glue is dry, square the ends of the blanks. Use a 3/8" barrel trimmer, or a universal pen blank squaring jig with a power disc sander. Take the excess material down flush with the ends of the brass tube. (do not trim beyond the length of the tube since this may interfere with operation of the mechanism and assembly). Use a barrel trimmer to clean the inside of the tube.

DIAGRAM B / TURNING THE BLANKS

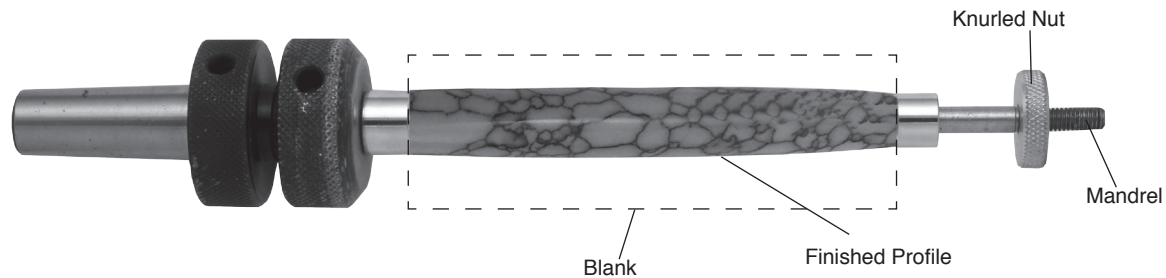**Turning the Blank**

- Mount the bushings and blanks according to diagram B.
- Thread on the knurled nut and hand tighten to hold all components in place.
- Slide the tailstock up snugly against the mandrel shaft inserting the live center point into the mandrel dimple, lock in place.
- Hand tighten the quill adjustment to firm up the mandrel. (DO NOT overtighten, it could damage the mandrel.
- Using sharp tools, turn the blank down close to the bushing diameter. Turn the barrel (straight or to a profile of your choice)
- Sand the blank down to be flush with the bushings gradually increasing the sandpaper grits.
- Finish the barrel with your choice of polish. Allow sufficient time for the polish to cure.
Refer to polish instructions.

Assembly

- Layout parts according to diagram A
- Affix the spring over the refill end.
- Drop refill into the opening at the front end assembly.
- Screw the twist mechanism over the refill and into the front end assembly.
- Attach the clip over the connector thread and screw the cap over tight.
- Press this assembly into either end of the barrel (avoid pressing & damaging the stone on end of cap)
- Insert the front end assembly into the opening at the barrel to close the gap.
- The pen operates by twisting the ends to advance or retract the refill.
- To replace the refill, unscrew front end assembly from the tip end.

Diagram C / Bushings #PKCHPENBU